

HandiWALL® Installation on Drywall

NOTE: Observe all safety precautions and wear all safety equipment before proceeding!

1. If necessary, cut your HandiWALL® panels to the desired length using an electric saw with a thin sharp blade.
2. Mark on your wall where you want the bottom of your HandiWall® installation to begin (this may be your floor). (See Figure 1)
3. Locate your studs and fasten the bottom panel of HandiWALL® with the provided screws. Be sure to make sure the panel is level before installing screws. (See Figure 2)
4. Proceed to install the next HandiWALL® panel on top the first leveled panel. HandiWALL® can be cut horizontally if necessary. Continue with all panels until complete. Install finish trim.

Installation on Concrete on other side

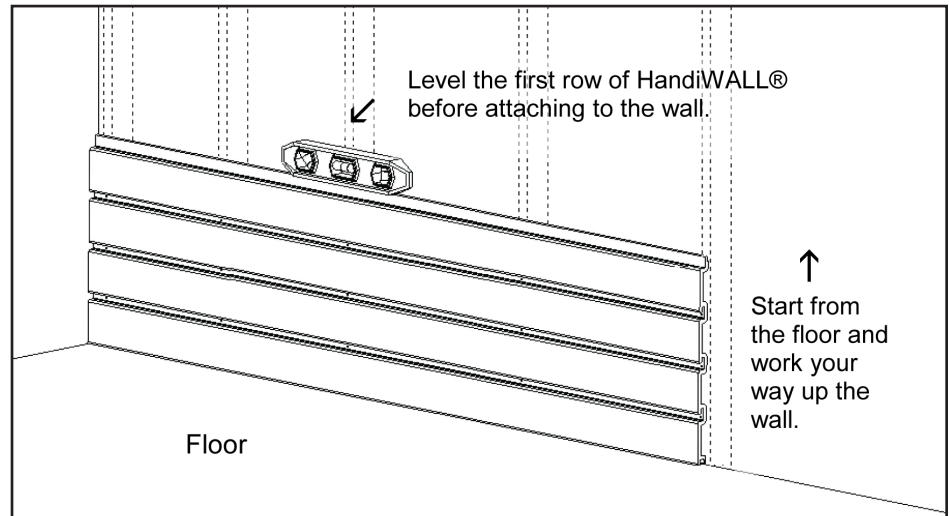


Figure 1. Level HandiWALL® before attaching it to the wall

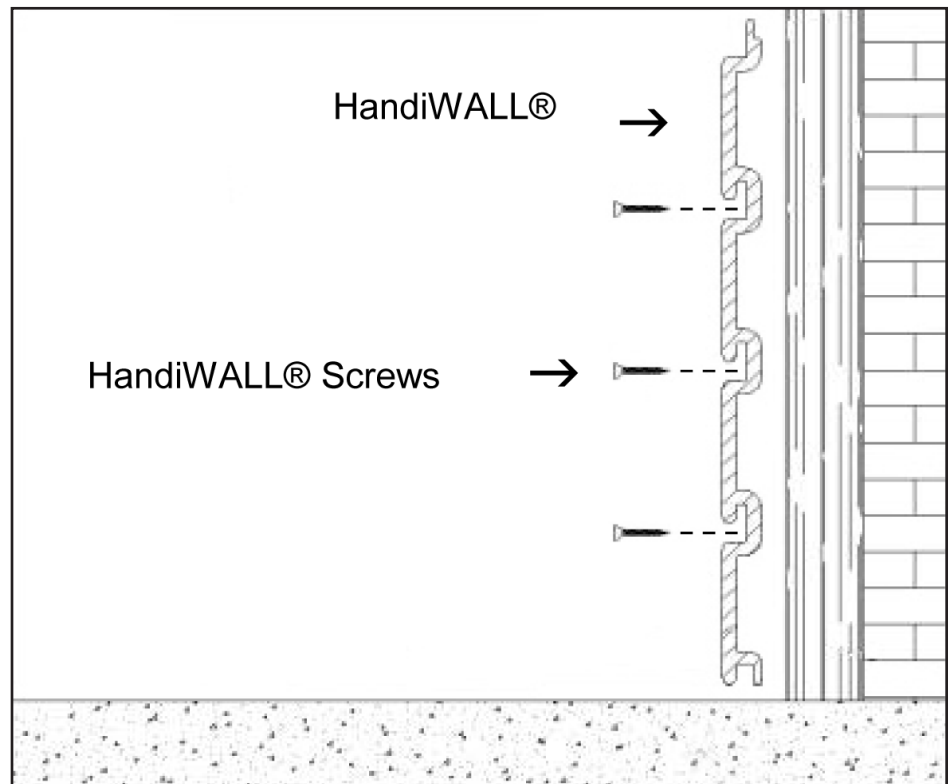


Figure 2. HandiWALL® installation.

HandiWALL® Installation on Concrete

NOTE: Observe all safety precautions and wear all safety equipment before proceeding!

1. If necessary, cut your HandiWALL® panels to the desired length using an electric saw with a thin sharp blade.
2. Mark on your wall where you want the bottom of your HandiWall® installation to begin (this may be your floor). (See Figure 1)
3. Pre-drill the concrete with 5/32 drill bit. Fasten the bottom panel of HandiWALL® with Tapcon® screws about 16 inches apart. Be sure to make sure the panel is level before installing screws. (See Figure 2)
4. Proceed to install the next HandiWALL® panel on top the first leveled panel. HandiWALL® can be cut horizontally if necessary. Continue with all panels until complete. Install finish trim.

Installation on Drywall on other side

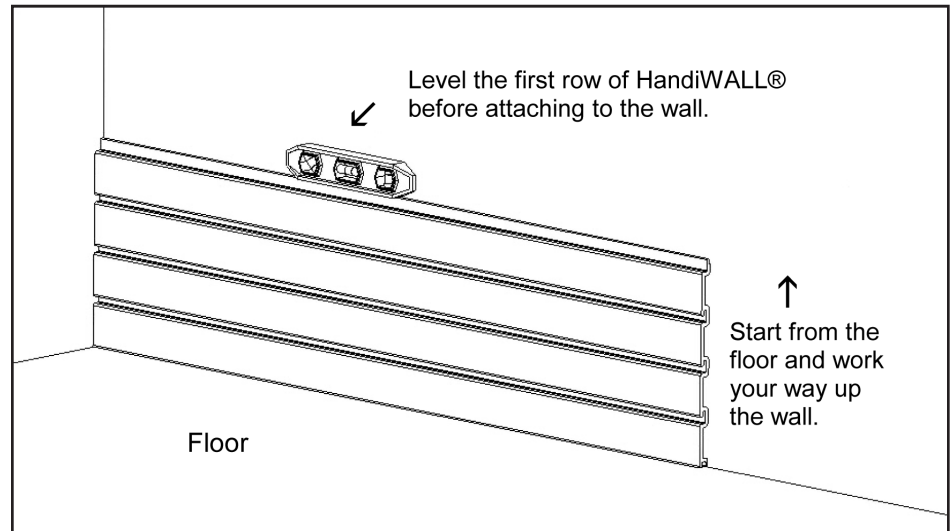


Figure 1. Level HandiWALL® before attaching it to the wall

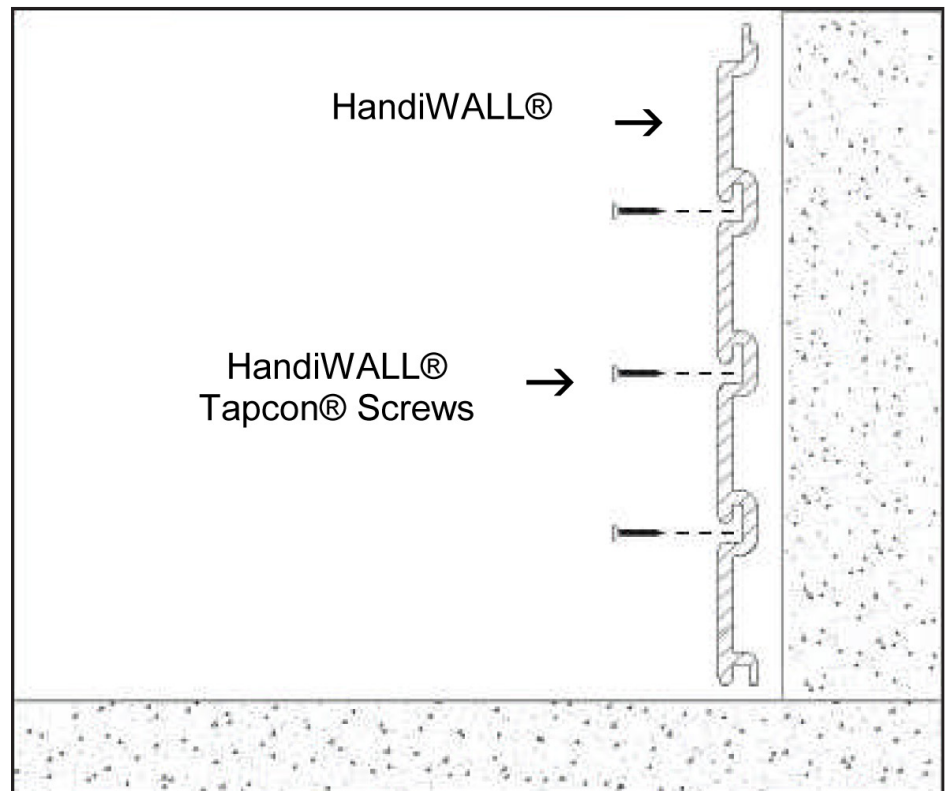


Figure 2. HandiWALL® installation.